

# TRACK STAR™




BY  **ANCRA**

**Quick Connect Wheel Chock  
For Standard Truck Beds and  
Flat Floor Trailers**

# ANCRA TRACKSTAR™ WHEEL CHOCK


## TRACK STAR™

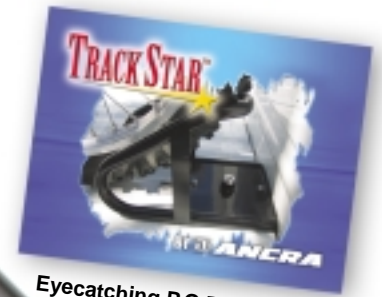

Eyecatching P.O.P Hangtag



Part No. 49603-10

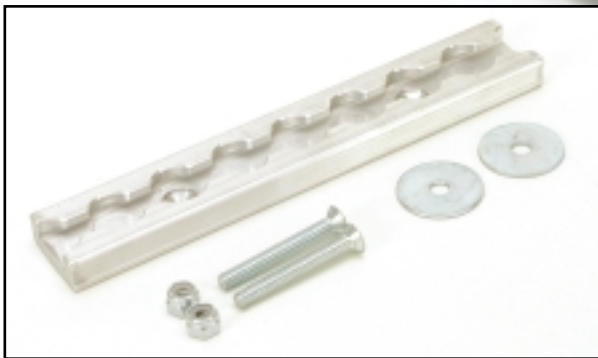

Aircraft Track and Hardware Included



Complete easy-to-follow installation instructions included

- Patented lock n' load system using high strength aircraft style track provides positive attachment to your bike hauler.
- Designed to fit front tires 3.5" to 5.5" wide.
- Reinforced, powder coated tubular steel, solid base plate, and aircraft style fasteners provide superior strength.
- To install, simply position chock stud feet into track, press down and slide chock forward.
- To remove, simply pull up on the top mounted "plunger" and slide chock out of the track. No Tools Required.
- Designed to fit standard truck beds and flat floor trailers.
- "Accessory mounting kits" (49288-10) are available to allow you to use your chock in more than one vehicle.

 **ANCRA**

[www.ancra.com](http://www.ancra.com)

Erlanger, KY 41018